



## Temperature limiting adjustment ST5000C Cartridge

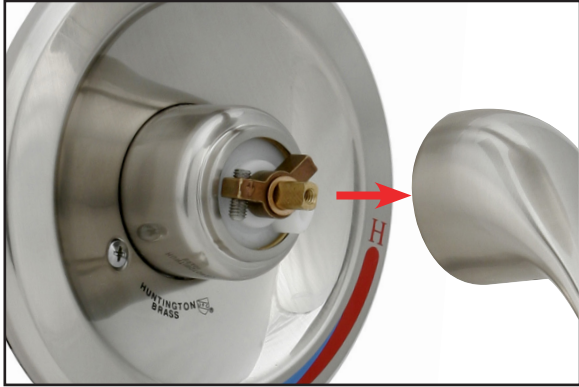

1. Remove handle.

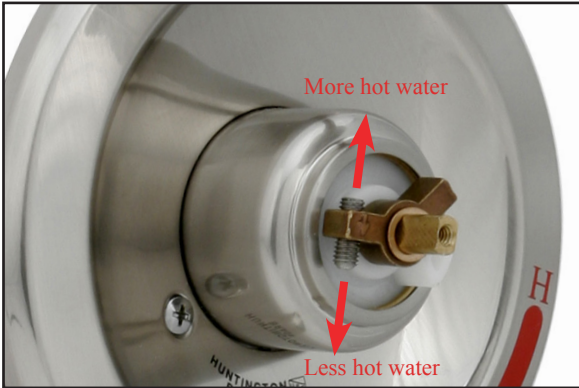

2. Using a allen wrench, turn the limiting screw to the desired position.

\* To adjust limit stop, turn counter clockwise for more hot water or clockwise for less hot water.

Reinstall everything in reverse order